



- NOTES:**
- THIS DIAGRAM SHOWS COMPLETE PROJECTOR WIRING.
 - CIRCLE SYMBOL (BEFORE OR AFTER PART NO.) INDICATES IN WHICH ASSY THE COMPONENT IS BEING USED:
- ① _____
 - ② TRANSFORMER ASSY
 - ③ CONNECTOR & LEAD ASSY
 - ④ SOUND HEAD ASSY
 - ⑤ HARNESS ASSY
 - ⑥ END CAP ASSY, REAR
 - ⑦ LAMP SOCKET
- 2" STRAIGHT PUSH ON CONNECTOR
 - PB PIGGY BACK PUSH ON CONNECTOR
 - F FLAG PUSH ON CONNECTOR
 - SOLDERED CONNECTION
- PARTS USED BUT NOT SHOWN:
- (2) 43767 - WIRE TIE
 - W. 48610 - STRAIN REL. EF

